

# **RUBBER ROOFING** ***DIRECT***

## Shed Rubber Installation Guide

**Only carry out this installation on a dry day where temperatures are above freezing!**

Included in your Rubber Roof Shed Kit:

1.2MM RUBBER ROOFING MEMBRANE	TUB OF WBA DECK ADHESIVE
	
GLOVES	6" MINI ROLLER
	

### **Step 1 – Before you start**

Open the box and familiarise yourself with the products supplied.

Please also read this installation guide through in its entirety before starting.

### **Step 2. (only if you are replacing an existing shed roof covering)**

Carefully remove the existing timber edge trims (fascias). Put them to one side if they are in good condition so you can re-fit them later.


Remove the old roof covering (usually felt), remove any exposed nails, all sharp surfaces and repair/replace any rotten deck boards. We recommend using OSB3 board if you need to fully replace them.

### **Step 3 – Preparing the shed roof**

Ensure that your deck surface is clean, dry, frost free and free from dust, grease, loose material and other contaminants.

Unwrap the **EPDM Rubber Roof Membrane** and place unfolded on the shed roof, ensuring you have equal coverage.

Wait for approximately half an hour for the EPDM to relax.

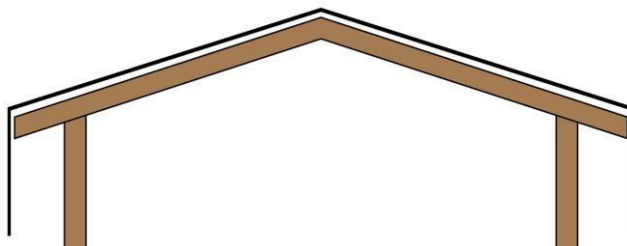


### **Step 4 – Fixing the EPDM Rubber Roof Membrane**

Fold back half of the **EPDM Rubber Roof Membrane** onto itself to expose the timber deck underneath.

Apply the **WBA Deck Adhesive** evenly over the roof deck with the **Mini Roller** supplied.


With the adhesive still wet, roll the membrane back into position using a soft broom to ensure no air is trapped underneath the membrane and to ease out any creases.

Repeat the process for the other half of the roof.

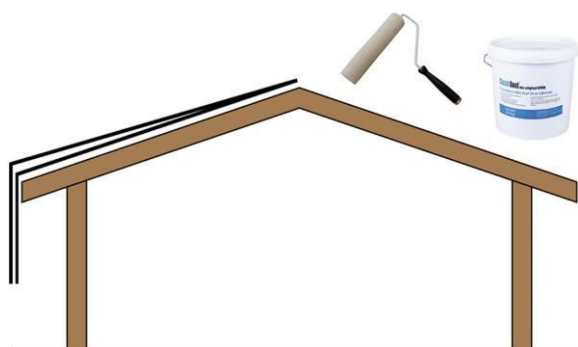


### **Step 5 – Trimming the EPDM to size**

Cut off any excess **EPDM Rubber Roof Membrane** using sharp scissors or a knife leaving approximately 50mm overhang.

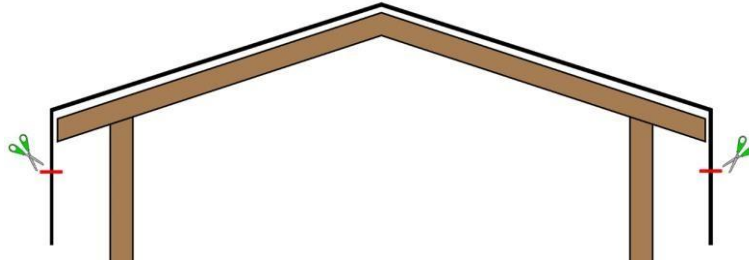

### **Step 6 – Finishing the drip edges**

Fold the membrane back on itself and fix using galvanised clout nails.

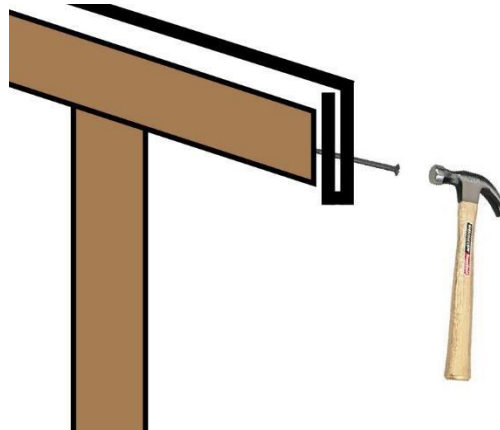

**As an alternative you could install black metal edge trims which are available on our website**

**If you encounter any problems whilst carrying out your installation or you need some advice, please contact us to speak to an experienced installer on 01306 776626**

**RUBBER ROOFING DIRECT LTD**

THE STORE  
CURTIS ROAD  
DORKING  
SURREY  
RH4 1SQ

01306 776626 | 0800 1588511  
[www.rubberroofingdirect.co.uk](http://www.rubberroofingdirect.co.uk)  
[info@rubberroofingdirect.co.uk](mailto:info@rubberroofingdirect.co.uk)